

取扱説明書

円形取付台
型式：SZ-010


SZ-010は、それぞれ下記機種に使用可能な取付台です。

使用可能機種
φ21.7のポール取付け仕様 (LR-USB、LR-IL、など)

取付け方法

結線する前に、下記の要領で正しく取付けの上、ご使用ください。

1. 取付台側面の六角穴付き止めねじをゆるめてください。
(別途、六角レンチ(対辺2mm)が必要です。)
2. ポールに付属のナット、取付けアングル等を取り外してください。
3. ポールを取付台上部から、底に突き当たるまで挿入します。
4. 円形取付台側面の六角穴付き止めねじで固定してください。

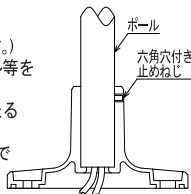

(注意) 六角穴付き止めねじは、定期的にゆるみがないか確認し、増し締めをおこなってください。

INSTRUCTION MANUAL

Circular bracket
Model : SZ-010


SZ-010 apply to below table.

Applied for
Pole mount type.(The diameter of pole : φ21.7) ~Series of LR-USB,LR-IL, etc..~


INSTALLATION

Before wiring, please mount it correctly as follows:

1. Please loosen the hexagonal hole screws on the side of the bracket.
(Please get the hexagonal wrench ready.
(The opposite side 2mm.))
2. Please remove the attached nuts on the pole.
3. Please insert the pole into a bracket from the top to the bottom.
4. Please fix the pole with the hexagonal hole screws on the side of the bracket.

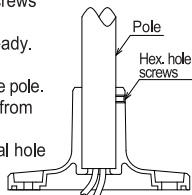

(Caution) Please check periodically that the hexagonal hole screws are not loosening. If they are loosening, please tighten.

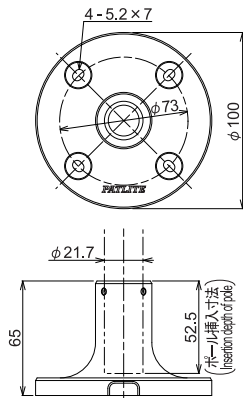

注意 [Caution]

- 寸法などは、改善のため予告なく変更することがありますので、御了承ください。
- Specifications may change without notice due to continual product improvement.

世界中に「安心・安全・楽業」をお届けする

株式会社 パトライト

J2G

www.patlite.co.jp

〔受付〕月～金 9:00～17:00

土・日・祝日・当社休業日を除く

●技術・修理相談窓口 (無料) : 0120-497-090

※ご注文・価格・納期等は、購入先にお問い合わせください。

PATLITE Corporation

G2K

PATLITE Corporation ※Head office

■www.patlite.com/

PATLITE (U.S.A.) Corporation

■www.patlite.com/

PATLITE Europe GmbH ※Germany

■www.patlite.eu/

PATLITE (SINGAPORE) PTE LTD

■www.patlite-ap.com/

PATLITE (CHINA) Corporation

■www.patlite.cn/

PATLITE KOREA CO., LTD.

■www.patlite.co.kr/

PATLITE TAIWAN CO., LTD.

■www.patlite.tw/

PATLITE (THAILAND) CO., LTD.

■www.patlite.co.th/